เพื่อให้โปรแกรมสามารถพิมพ์ใบเสร็จรับเงินเป็นแบบสลิปขนาดความกว้าง 50 มิลลิเมตร หรือ 80 มิลลิเมตร

1. ไปที่ Startเลือก Devices and Printers



2. คลิกเลือกเครื่องพิมพ์ แล้วคลิกที่ Print server properties



3. จะมีหน้าต่าง Print Server Properties แสดงดังรูป

0.14			^	Delete
1x17				
2x11			•	Save Form
orm <u>n</u> ame:	10x11			
neasuremer Form descr	v form by editing the hts. Then click Save F iption (measuremen	existing name ar form. ts)	id	
neasuremer Form descr Units:	v form by editing the nts. Then click Save F iption (measuremen @ <u>M</u> etric	existing name ar Form. ts) © <u>E</u> nglish	d	
Form descr Units: Paper size:	v form by editing the nts. Then click Save F iption (measuremen <u>Metric</u> Printe	existing name ar Form. ts) © <u>E</u> nglish r area margins:	d	
Form descr Units: Paper size:	v form by editing the nts. Then click Save F iption (measuremen <u>Metric</u> Printe 25.40cm <u>L</u> eft:	existing name ar Form. (b) (c) <u>E</u> nglish r area margins: (0.00cm	id Jop:	0.00cm

4. ตั้งค่าต่างๆ ดังนี้

- 4.1 เลือก Create a new form
- 4.2 ตั้งชื่อฟอร์ม 80mm (ตั้งชื่อให้ง่ายต่อการจดจำ ถ้าใช้กระดาษกว้าง 58มม. อาจจะตั้งเป็น 58mm)
- 4.3 เลือกหน่วยวัดเป็น Metric
- 4.4 ใส่ความกว้างและความสูงดังนี้
 - Width = 8.00cm (กระดาษกว้าง 58มม. ใส่ค่าเป็น 5.80cm)
 - Height = 29.70cm
- 4.5 คลิกปุ่ม Save Form

	Ports	Drivers S	Security Adv	anced			-1
Form	s on:	SASOFT	-NB				
10x11	Ę.					Delete	
10x14						directories	
12x11					-	Save Form	ŀ
Form	name:	80n	nm			2	
	eate a r	new form	1				
			;				- 11
142101201		The second second second		and the second sec			
Defin	e a new	form by e	diting the exi	sting name an	d		
Defin meas	e a new uremer	form by entry the form by entry the form by entry the formation of the for	diting the exi ick Save Forn	sting name an n.	d		
Defin meas Form	e a new uremer n descr	form by entry form by entry the form by entry	diting the exi ick Save Forn asurements)	sting name an n.	d		
Defin meas Forr	e a new uremer n descri	form by entry form by entry form by entry	diting the exi ick Save Forn asurements)	sting name an n.	d		
Defin meas Forr Unit	e a new uremer n descr s:	form by entry form by entry. Then cl iption (mean <u>M</u> e	diting the exi ick Save Forn asurements) tric	sting name an n. © <u>E</u> nglish	d		
Defin meas Forr Unit Pap	e a new uremer n descr s: er size:	form by entry form by entry form by entry	diting the exi ick Save Forn asurements) tric 3 Printer are	sting name an n. © <u>E</u> nglish ea margins:	d		
Defin meas Forr Unit Pap <u>W</u> id	e a new uremer n descr s: er size: th:	form by entry form by entry form by entry form of the second seco	diting the exi ick Save Forn asurements) tric Printer are eft:	sting name an n. © <u>E</u> nglish ea margins: 0.00cm	d <u>T</u> op:	0.00cm	
Defin meas Forr Unit Pap <u>W</u> id	e a new uremer n descr s: er size: th:	form by entry form by entry. Then cl	diting the exi ick Save Forn asurements) tric 3 Printer are eft: Right:	sting name an n. © <u>E</u> nglish ea margins: 0.00cm	d <u>T</u> op:	0.00cm	
Defin meas Forr Unit Pap <u>W</u> id <u>H</u> eig	e a new uremer n descr s: er size: th: ght:	form by entry form by entry form by entry form (measurement of the second secon	diting the exi ick Save Form asurements) tric Printer are eft: <u>R</u> ight:	sting name an n. © <u>E</u> nglish ea margins: 0.00cm 0.00cm	d <u>T</u> op: <u>B</u> ottom:	0.00cm 0.00cm	
Defin meas Forr Unit Pap <u>W</u> id <u>H</u> eig	e a new uremer n descr s: er size: th: ght:	form by entry form by entry form by entry entry for the second se	diting the exi ick Save Forn asurements) tric Printer are eft: Right:	sting name an n. © <u>E</u> nglish ta margins: 0.00cm 0,00cm	d Iop: <u>B</u> ottom:	0.00cm 0.00cm	
Defin meas Forr Unit Pap <u>W</u> id <u>H</u> eig	e a new uremer n descr s: er size: th: ght:	form by entry form by entry. Then claiming the second seco	diting the exi ick Save Form asurements) tric Printer are eft: Right:	sting name an n. © <u>E</u> nglish ea margins: 0.00cm 0.00cm	d <u>T</u> op: <u>B</u> ottom:	0.00cm 0.00cm	

5. คลิกขวาที่เครื่องพิมพ์สลิปเลือก Printing preferences



- เลือกแท็บ Layout แล้วตั้งค่าต่างๆ ดังนี้
 - Paper Size = Roll Paper 80 x 297 mm
 - Output Paper =80mm Roll Paper

Printer Settings	Barcode 2	D Code	Font	Utility	Version
Main Layout	Watermark	Doc	ument Settings	Halftor	ne Settings
Paper Size	oll Paper 80 x 297 i	nm			
			-		
Dutput Paper 80)mm Roll Paper			- 2	
Adjust Print Position					
Vertical Direction	0.0 📄 mm	Horizonta	al Direction 0.0	🚔 mm	
Rotate					
Normal		Abo	3		
🔘 Rotate by 90 Deg	grees		1		
Rotate by 180 De	egrees		Sk.		
Botate by 270 De	- arees				
0.000,000					
Reduced Size Pri	int (Bar codes/2D :	symbols are	not reduced)		
It to Printable W	idth				
Custom		Scale	100.00	(A) (V)	
	4			3	
	< /				

7. เลือกแท็บ Document Settings

ตั้งค่า Paper Conservation: <Top & Bottom>

Main Layout Watemark Document Settings — Paper Conservation: < Top & Bottom> 1 — Print all text as graphic images: <no> 1 — Paper Source: <document[feed,cut]> </document[feed,cut]></no>	Halftone Setting
EPSON TM-T82 ReceiptSA4 Document Settings Paper Conservation: < Top & Bottom I) Print all text as graphic images: <no> I) Print all text as graphic images: <no> I) Printing Speed: <document[feed,cut]> Printing Speed: <use printer="" settings="" the=""> Large device font smoothing: <enable> Cash Drawer Send command Start of Document: <do not="" send=""> Start of Document: <do not="" send=""> Start of Page: <do not="" send=""> Start of Page: <do not="" send=""> End of Page: <do not="" send=""></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></enable></use></document[feed,cut]></no></no>	
Paper Conservation: <top &="" bottom=""> 1 Print all text as graphic images: <no> Pint all text as graphic images: <enable> Paper Conservation Paper Conservation None Top Bottom</enable></no></no></no></no></no></no></no></no></no></no></no></no></no></top>	
Print all text as graphic images: <no> Print all text as graphic images: <no> Printing Speed: <document[feed,cut]> Printing Speed: <use printer="" settings="" the=""> Large device font smoothing: <enable> Cash Drawer Send command Pstart of Document: <do not="" send=""> Pater of Document: <do not="" send=""> Start of Page: <do not="" send=""> Start of Page: <do not="" send=""> Do not send> Do not send> Paper Conservation None Top Bottom</do></do></do></do></enable></use></document[feed,cut]></no></no>	
Input Unit: <0.1 mm> Paper Source: <document[feed,cut]> Printing Speed: <use printer="" settings="" the=""> Cash Drawer Send command Start of Document: <do not="" send=""> End of Document: <do not="" send=""> End of Document: <do not="" send=""> End of Page: <do not="" se<="" td=""><td></td></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></use></document[feed,cut]>	
Paper Source: <document[feed,cut]> Printing Speed: <use printer="" settings="" the=""> Cash Drawer Send command Send command Start of Document: <do not="" send=""> Start of Document: <do not="" send=""> Start of Page: <do not="" send=""> Start of Page: <do not="" send=""> Do not send> Do not send> Document: <do not="" send=""> Do not send> Document: <do not="" send=""> Do not send> Document: <do not="" send=""> Document: <do not="" send=""> Do not send> Document: <do not="" send=""> Document: <document: <documen<="" <document:="" td=""><td></td></document:></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></use></document[feed,cut]>	
Printing Speed: <use printer="" settings="" the=""> Large device font smoothing: <enable> Cash Drawer Send command Start of Document: <do not="" send=""> Start of Document: <do not="" send=""> Start of Page: <do not="" send=""></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></enable></use>	
Cash Drawer Cash Drawer Send command Start of Document: <do not="" send=""> End of Document: <do not="" send=""> Start of Page: <do not="" send=""> Start of Page: <do not="" send=""> End of Page: <do not="" send=""> End of Page: <do not="" send=""> </do></do></do></do></do></do>	
Send command Start of Document: <do not="" send=""> End of Document: <do not="" send=""> Start of Page: <do not="" send=""> Start of Page: <do not="" send=""> Do not send> Do not send></do></do></do></do>	
Start of Document: <do not="" send=""> End of Document: <do not="" send=""> Start of Page: <do not="" send=""> End of Page: <do not="" send=""> End of Page: <do not="" send=""> End of Page: <do not="" send=""> Start of Page: <don not="" send<="" td=""><td></td></don></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do>	
End of Document: <do not="" send=""> Start of Page: <do not="" sen<="" td=""><td></td></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do></do>	
Paper Conservation None Top Bottom	
End of Page: <do not="" send=""> End of Page: <do not="" send=""> Paper Conservation None Top Bottom</do></do>	
Paper Conservation None Top Bottom	
Paper Conservation None Top Bottom	
None Top Bottom	
Top Bottom	
TRANSFERRAL CONTRACTOR OF TRANSFERRAL	
L op & Bottom	
(TT) (TT)	2
4 3	

8. ถ้าต่อลิ้นชักเก็บเงิน (Cash Drawer) ต่อจากเครื่องพิมพ์สลิปด้วย ให้ตั้งค่าต่างๆ ดังนี้

ตั้งค่า Cash Drawer เป็น Open after printer (คือให้เปิดลิ้นชักเก็บเงินหลังจากที่พิมพ์สลิปเสร็จแล้ว อาจจะเป็นแบบ 2 Pins หรือ 5 Pins)

rinter setti	ngs	Barcode	2D Code	Font	Utility	Version
Main	Layout	Water	nark Do	cument Settings	Halft	one Settings
EPSON Par Prir Par Prir Lar Ser Carb Draw	TM-T82 per Conse nut Unit: <0 per Sourc nting Spec ge device sh Drawe of Comma Start of I End of D Start of P go Printing	ReceiptSA4 D arvation: <top as graphic imag D.1 mm> e: <document ed: <use p<br="" the="">and 1 Document: <do ocument: <do ocument: <do ocument: <do ocument: <do ocument: <do< th=""><td>ocument Settir & Bottom> ges: <no> (Feed,Cut]> rinter settings> g: <enable> o not send> o not send> send> send></enable></no></td><td>gs</td><td></td><td></td></do<></do </do </do </do </do </use></document </top 	ocument Settir & Bottom> ges: <no> (Feed,Cut]> rinter settings> g: <enable> o not send> o not send> send> send></enable></no>	gs		
Cash Dr	awer #1 (;	2 Pins)	Open afte	er printing		•
COMPT) (P)	Teactor			
Cash Dr	awer #2 (5 Pins)	Do not op	en (Do not send	command)	•